


IN8173

Tailgate Grille / Blank

KIT CONTENTS

FX4090 X4
(No8x1/2" SELF-TAP SCREW)



CAUTION

It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.

If in doubt refer to the vehicle manufacturer's dealership.

EXAMPLE IMAGES




TOOLS REQUIRED

PH SCREW DRIVER X 1



DRILL (Ø3.2MM) X 1

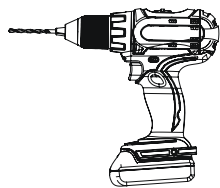

INSTRUCTIONS

1. Place the tailgate grille / blank into the window aperture as shown in the image to the right. Please note that the bottom of the grille (next to the trim) is not secured.
2. Once happy with the position of the grille / blank carefully drill 3.2mm holes for the self-tapping screws. Take care not to catch any wires.
3. Secure in place using the self-tap screws provided. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.